

TX-5600/TX-5600E/ TX-5700/TX-5700E JUMPER SETTING

- **JP1 : COM1/COM2 12V DC SUPPLY SELECT**

Pin 1-3 Short : COM1 Pin1 connected to 12V

Pin 3-5 Short : COM1 Pin1 connected to DCD

Pin 2-4 Short : COM2 Pin1 connected to 12V

Pin 4-6 Short : COM2 Pin1 connected to DCD

- **JP2 : For CR open/close status port selection**

Pin 1-3 、 2-4 Short: For COM1

Pin 3-5 、 4-6 Short : For COM5

- **JP3 : COM3 12V DC SUPPLY SELECT**

Pin 1-3 Short : COM3 Pin1 connected to 12V

Pin 3-5 Short : COM3 Pin1 connected to DCD

- **JP5 : COM5/COM6 12V DC SUPPLY SELECT**

Pin 1-3 Short : COM5 Pin1 connected to 12V

Pin 3-5 Short : COM5 Pin1 connected to DCD

Pin 2-4 Short : COM6 Pin1 connected to 12V

Pin 4-6 Short : COM6 Pin1 connected to DCD

- **SW1 : Clear CMOS & Touch Panel OS Support Setting**

DIP	Switch select	
1 & 2	1: ON, 2: ON	Reserved
	1: ON, 2: OFF	Normal Operation
	1: OFF, 2: ON	Clear CMOS
	1: OFF, 2: OFF	Reserved
3	3: ON	Disable Flash Descriptor Security (override)
	3: OFF	Enable security measures defined in the Flash Descriptor

- **COM1~COM6 : +5V through BIOS ; VGA +12V through BIOS**

Press F2 to access Advanced/OEM IO Configuration

VGA DSUB 12V : Disabled

COM1 DB9 5V : Disabled

COM2 DB9 5V : Disabled

COM3 DB9 5V : Disabled

COM4 DB9 5V : Disabled

COM5 DB9 5V : Disabled

COM6 DB9 5V : Disabled

