

**HS-2410A Series 2"Printer Jumper Setting****● SOFTWARE SWITCH 1**

There is no hardware Dip Switch for HS-2410A Series 2" Printer.

<b>SWITCH 1</b>	<b>FUNCTION</b>
<b>1</b>	<b>Reserve</b>
OFF	
ON	
<b>2</b>	<b>Reserve</b>
OFF	
ON	
<b>3</b>	<b>Cut Paper after Cover Return</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>4</b>	<b>Full Cut Paper</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>5</b>	<b>Busy condition</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>6</b>	<b>Before Cut Paper</b>
<b>OFF</b>	<b>Normal Cut</b>
ON	Cut and without paper feed
<b>7</b>	<b>Auto cutter</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>8</b>	<b>USB condition</b>
OFF	Zero packet
<b>ON</b>	<b>NAK packet</b>

● SOFTWARE SWITCH 2 :

SWITCH 2		FUNCTION
1		Reserve
OFF		
ON		
2	3	Print Speed
OFF	OFF	80 mm/s
OFF	ON	60 mm/s
ON	OFF	100 mm/s
ON	ON	50 mm/s
4		Paper Feed Back
OFF		Disable
ON		Enable
5		Reserve
OFF		
ON		
6		Reserve
OFF		
ON		
7		Reserve
OFF		
ON		
8		< CR > Auto Line Feed
OFF		Disable
ON		Enable

● SOFTWARE SWITCH 3 :

SWITCH 3			FUNCTION
1			UPOS Write
OFF			Disable
ON			Enable
2			Beep Sound after Cut paper
OFF			Disable
ON			Enable
3	4	5	Print Density
OFF	OFF	OFF	100%
ON	OFF	ON	110%
OFF	ON	OFF	120%
ON	ON	ON	130%
6			Reserve
OFF			
ON			
7			Thai Font mode
OFF			1 PASS
ON			3 PASS
8			Cover Open Message
OFF			Disable
ON			Enable

● SOFTWARE SWITCH 4 :

SWITCH 4		FUNCTION
1		Reserve
OFF		
ON		
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Reserve
OFF		
ON		

€ J4: Use for Firmware download.

J4	FUNCTION
Open	Normal Mode
Short	Firmware download mode