

HS-3510W/HS-3512W/HS-3514W JUMPER SETTING

- **JP1 : COM3 PORT DC SUPPLY SELECT**

Pin 1-2 Short : COM3 Pin1 connected as 12V DC

Pin 2-3 Short : COM3 Pin1 connected as DCD

- **JP2 : Select LCD Power**

Pin 1-2 Short : 3.3V

Pin 2-3 Short : 5V

- **JP3 : For CR open/close status port selection**

Pin 1-3 、 2-4 Short: For COM1

Pin 3-5 、 4-6 Short : For COM5

- **JP7 : COM1/COM2 PORT DC SUPPLY SELECT**

Pin 1-3 Short : COM1 Pin1 connected as 12V DC

Pin 3-5 Short : COM1 Pin1 connected as DCD

Pin 2-4 Short : COM2 Pin1 connected as 12V DC

Pin 4-6 Short : COM2 Pin1 connected as DCD

- **COM1~COM3 : +5V through BIOS ; VGA +12V through BIOS**

Press ESC to access Advanced/ Miscellaneous Configuration

VGA DSUB 12V : Disabled

COM1 DB9 5V : Disabled

COM2 DB9 5V : Disabled

COM3 DB9 5V : Disabled

※ **DIP SWITCH2 (SW2) :**

| SWITCH2 | | FUNCTION |
|---------|-------|--|
| 1 On | 2 OFF | Default |
| 1 OFF | 2 ON | Clear CMOS |
| 3 | OFF | Linux or WinCE |
| | ON | Windows OS(Win98, Win2000, WinXP)(Default) |
| 4 | OFF | Fujitsu Touch Panel. |
| | ON | ELO Touch Panel or ABON Touch Panel |
| 5 | ON | Ms-DOS |
| | OFF | (Windows, Linux ,Win CE(Default) |
| 6 | ON | Reserved |
| | OFF | Reserved |
| 7 | ON | Reserved |
| | OFF | Reserved |
| 8 | ON | Reserved |
| | OFF | Reserved |

