

XT-8315/XT-8315E JUMPER SETTING

- **JP3: COM1/COM2 PORT DC SUPPLY SELECT**

Pin 1-3 Short : COM1 Pin1 connected as 12V DC

Pin 3-5 Short : COM1 Pin1 connected as DCD

Pin 2-4 Short : COM2 Pin1 connected as 12V DC

Pin 4-6 Short : COM2 Pin1 connected as DCD

- **JP4 : For CR open/close status port selection**

Pin 1-3 、 2-4 Short: For COM1

Pin 3-5 、 4-6 Short : For COM5

- **JP5 : COM3 PORT DC SUPPLY SELECT**

Pin 1-2 Short : COM3 Pin1 connected as 12V DC

Pin 2-3 Short : COM3 Pin1 connected as DCD

- **JP6 : TOUCH SOUNDS SELECT**

Pin 1-2 Short : Normal USB Used

Pin 2-3 Short : for Resistive touch sounds used

- **JP2 & JP7 : SATA & M.2 SSD SELECT (FOR Mainboard version A only)**

JP2	JP7	M.2 SSD2 Port	SATA1 Port	SATA2 Port
1-2	1-2	M.2 PCIe×4	X	X
2-3	1-2	M.2 SATA	SATA	X
2-3	2-3	X	SATA	SATA

- **JP2 & JP7 : M.2 SSD2/ M.2 SSD1 SELECT (FOR Mainboard version B)**

JP2 Pin 1-2 Short : M.2 SSD2 PCIe Function

JP2 Pin 2-3 Short : M.2 SSD2 SATA Function

JP7 Pin 1-2 Short : M.2 SSD1 PCIe Function

JP7 Pin 2-3 Short : M.2 SSD1 SATA Function

- **SW1 : Clear CMOS Setting**

DIP	Switch select	
1	OFF	Normal Operation
	ON	Clear CMOS
2	OFF	Enable security measures defined in the Flash Descriptor
	ON	Disable Flash Descriptor Security (override)

- **COM1~COM3 、 COM5 ~ COM6 : +5V through BIOS ; VGA +12V through BIOS**

Press ESC to access Configuration/Super IO Configuration /OEM IO Configuration

VGA DSUB 12V : Enabled

COM1 DB9 5V : Disabled

COM2 DB9 5V : Disabled

COM3 DB9 5V : Disabled

COM5 DB9 5V : Disabled

COM6 DB9 5V : Disabled

