

CR-200X Series USB Interface Jumper Setting

JP1-1	JP1-2	JP1-3	JP1-4	USB PID
ON : RS232 TYPE OFF : USB TYPE	ON	ON	ON	8
	OFF	OFF	OFF	7(Default)
	OFF	OFF	ON	6
	OFF	ON	OFF	5
	OFF	ON	ON	4
	ON	OFF	OFF	3
	ON	OFF	ON	2
	ON	ON	OFF	1