

## XT-5315 Pro/XT-5515 Pro JUMPER SETTING

- **JLVDS\_SEL1 : LVDS Voltage Selection**
  - Pin 1-3 Short : 3.3V
  - Pin 3-5 Short : 5V
  - Pin 2-4 Short : Single Channel LVDS
  - Pin 4-6 Short : Dual Channel LVDS
- **JCOM\_SEL1 : COM1/COM2 Port DCD/12V Output Select**
  - Pin 1-3 Short : COM1 Pin1 connected to 12V
  - Pin 3-5 Short : COM1 Pin1 connected to DCD
  - Pin 2-4 Short : COM2 Pin1 connected to 12V
  - Pin 4-6 Short : COM2 Pin1 connected to DCD
- **JCOM\_SEL2 : COM3/COM4 Port DCD/12V Output Select**
  - Pin 1-3 Short : COM3 Pin1 connected to 12V
  - Pin 3-5 Short : COM3 Pin1 connected to DCD
  - Pin 2-4 Short : COM4 Pin1 connected to 12V
  - Pin 4-6 Short : COM4 Pin1 connected to DCD
- **JCOM\_SEL3 : UPS Status**
  - Pin 1-2 Short : for COM6 SIN
  - Pin 3-4 Short : for UPS STATUS to Host
- **JCR\_SEL1 : CR Port Open/Close Status Select**
  - Pin 1-3 、 2-4 Short : For COM1
  - Pin 3-5 、 4-6 Short : For COM5
- **COM1~COM6 +5V through BIOS ; VGA +12V through BIOS**

Press F2 to access Chipset\PCH-IO Configuration\

  - VGA DSUB 12V : Disabled
  - COM1 DB9 5V : Disabled
  - COM2 DB9 5V : Disabled
  - COM3 DB9 5V : Disabled
  - COM4 DB9 5V : Disabled
  - COM5 DB9 5V : Disabled (Option)
  - COM6 DB9 5V : Disabled (Option)

• **DIP SWITCH1 (SW1) :**

SWITCH1		FUNCTION
1 On	2 OFF	Default
1 OFF	2 ON	Clear CMOS
3	OFF	Linux or WinCE
	ON	Windows OS(Win98, Win2000, WinXP)(Default)
4	OFF	Fujitsu Touch Panel.
	ON	ELO Touch Panel or ABON Touch Panel
5	ON	Ms-DOS
	OFF	(Windows, Linux ,Win CE(Default)
6	ON	Disable On Board USB Touch
	OFF	Enable On Board USB Touch
7	ON	Reserved
	OFF	Reserved
8	ON	Disable Flash Descriptor Security
	OFF	Enable security measures defined in the Flash Descriptor

